


BATTERY PACK OPERATION MANUAL


To check the status of the battery press the power button once quickly.

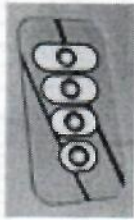

The green lights will indicate battery level.

To turn on the battery pack;

Press and hold the power button. The green light will turn on.

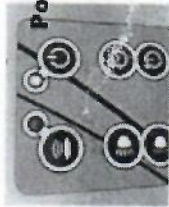

To turn off the battery pack press and hold the power button until the green light goes out.

When the battery level becomes low the alarm will sound. Press the power button to silence the alarm. Then press and hold the power button to turn off the battery.

To charge the battery pack plug the power supply into the port on the side or front of case.

When the battery is charging the green lights will flash in sequence, when the charging is complete all four green lights will stay on.

ALWAYS KEEP BATTERY FULLY CHARGED!

***TO GET THE BEST PERFORMANCE OUT OF YOUR
MAGNUM READ THE MANUAL!!!***



QUICK START GUIDE FOR MAGNUM WITH LITHIUM BATTERY PACK



- Place controller on mounting bracket or level surface
- Insert USB stick
- Connect patch cable to reel & controller
- If battery low, plug in power supply (See opposite side of this page for Charging)
- Press power button to turn on (See key functions diagram on opposite side of this chart)
- "USB DISC 1 PLUG IN" message will appear on main navigation screen, Press Right arrow button & select "REEL IN". (Some systems this will happen automatically)
- Press ENTER & wait for video screen to appear (20 seconds)
- Use SPACEBAR on keyboard to see different reel types
- Once your Reel is displayed, Press RESET button on keypad to remove logo & lock reel type
- Record by pressing the Large RED RECORD button on keypad
- To Stop Recording press STOP
- To pause recording press PAUSE
- To reset footage counter, press & hold COUNTER RESET button for 3 seconds
- To remove counter display, press COUNTER POSITION button (each time it is pressed it will move to a new location on screen)
- To Zoom, press RESET button quickly (each time it is pressed it will Zoom in more, keep pressing to return back to normal 1X. Use the arrows to move picture)
- To add text to the video, Press F1 through to F8 to produce text page
- Use keyboard to type text
- F9 will hide text page

- To activate microphone toggle **PAUSE/BREAK** key on keyboard (the symbol on footage counter will change from speaker to microphone)
- To view recording, press **HOME** button on keypad
- Press **LEFT ARROW** to navigate, browse USB stick
- Press **ENTER** button, for the file menu
- Highlight USB & press **ENTER**
- Use up/down arrow buttons to highlight **REC FOLDER**
- Press **ENTER**
- Use up/down arrow buttons to select your video
- Press, **PLAY** to view your video, and **STOP** button to stop playing
- Press **HOME** to return to main menu

